

INSTALLATION INSTRUCTIONS

ENDURO GRAPHICS CHANGE OUT


**WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

ED150, 175, 200, 250 and 300 Merchandiser/Graphics Removal

1. Remove plastic lid from top of unit.
2. Push up on bottom of the merchandiser to disengage retaining hooks from the cabinet on both sides (see Figure 1).
3. Pull bottom of the merchandiser forward until the top of the merchandiser clears the hopper flange (see Figure 2).

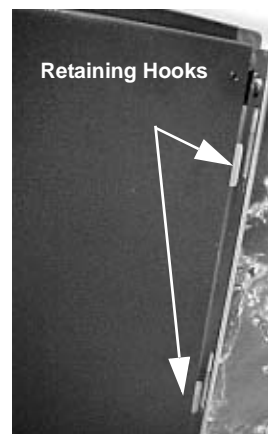**Figure 1****Figure 2**

4. For FlavorBlast units, remove the bottom switch from the circuit board, as shown in Figure 3.

**Figure 3**

5. Remove merchandiser.
6. Turn retaining tabs to loosen the inner lens, may need a Phillips screwdriver (see Figure 4).



Retaining tab, turn to loosen or tighten (Phillips screwdriver optional)

Figure 4

7. Remove the diffuser and graphic (see Figure 5).
8. Replace graphic.
9. Re-install diffuser and graphic (make sure graphic is right side up).
10. Turn retaining tabs back to lock diffuser and graphic in place.
11. Replace the merchandiser in the reverse order. The hooks must be fully engaged in the cabinet and the bottom locating tabs (if applicable) must be seated in the beverage panel.
12. Re-install lid.

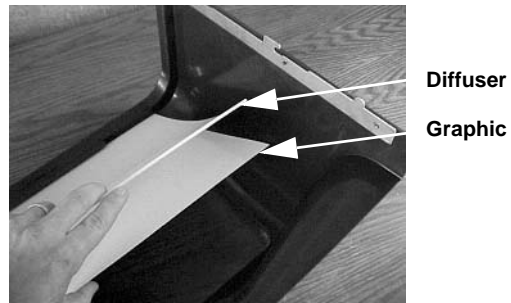


Figure 5