

# INSTALLATION INSTRUCTIONS

## Quest Water Connector Replacement

### SAFETY INSTRUCTIONS

 **WARNING:**

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

**Failure to comply could result in serious injury, death or damage to the equipment.**

### QUALIFIED SERVICE PERSONNEL

 **WARNING:**

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

**All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.**

### SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

 **WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

 **CAUTION:**

Always be sure to keep area around the unit clean and free of clutter.

**Failure to keep this area clean may result in injury or equipment damage.**

## INSTALLATION INSTRUCTIONS

Perform the following procedure when replacing the water connector:



**NOTE: This fix is intended to eliminate the lateral strain on the water connector due to the tilted orientation of the water manifold causing a short hose connection and undue stress on the coupler.**

1. Cut the wire ties holding the manifold to the pump tubes.



Figure 1.

2. Gently pull back on the manifold until it is close to vertical as shown. Do Not pull back too far as this may cause the pump lines to kink or flatten. Pump line should remain round, as shown

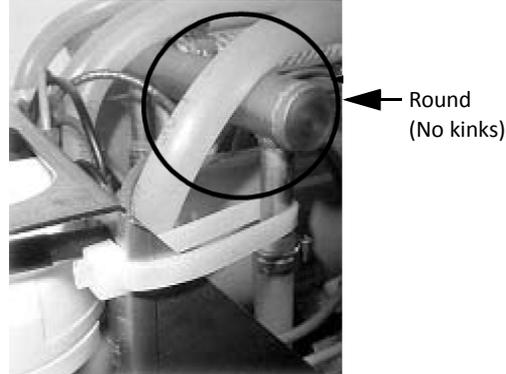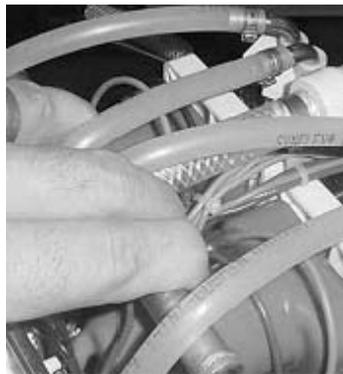

3. Secure with the wire tie provided. Repeat this procedure on the other side. Be sure that the manifold is pulled back evenly on each side and it is parallel to the bracket as shown below.
4. Change out connector with the assembly provided.

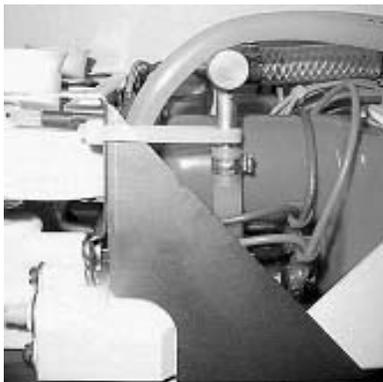


Figure 2.

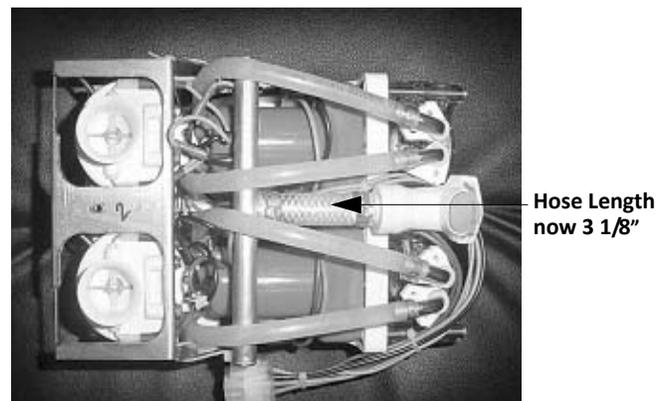


Figure 3.