



AUTOMATIC CREW SERVE DISPENSER

Preventative Maintenance and Cleaning

Daily

Nozzle and Diffuser

- Rotate the nozzle clockwise and pull down to remove it.
- Pull down on diffuser to remove.
- When re-assembling, line up gasket notches to diffuser notches.



First, stop dispenser by pushing Manual Mode button.

When washing, do not soak gasket more than 2 minutes.

Smooth side should be against diffuser.

Drip Tray

- Disconnect ethernet cable from the cover before fully removing.
- Rinse drip tray with water before replacing carousel. Then, sanitize all and air dry.



Two thumbscrews on carousel cover.

Never place any parts in dishwasher.

Exterior

- Wipe drip-tray area, splash panel, and exterior panels.
- Flush drip tray with carbonated water.

Do not clean the touchscreen with solvents or cleaning agents.



Watch the Preventative Maintenance and Cleaning Video for complete steps.

Cup Carousel

- Before fully removing cover, disconnect ethernet cable from the carousel.
- Lift carousel, then cup rest up to remove and clean.



Weekly

Make sure water deflector gasket is in place underneath the carousel.

Never place any parts in dishwasher.

Ice Chute

- Lift chute up until it “clicks” to remove.
- Wash, rinse, sanitize and air dry.



When replacing, make sure cover side latches are flush with the ice chute base.

Exterior

- Wipe cup dropper cover, backsplash, side walls, and top exterior panels.

