

Jetspray Daily Cleaning and Sanitizing Procedures



01 After discarding the product, remove the bowl cover.



02 Push back on the handle to release the pinch tube and bowl from the base.



03 Now the entire bowl assembly can be removed for cleaning.



04 Place the bowl on a counter or in a sink.



05 Remove the pinch tube by pulling straight up.



06 Remove the impeller by pulling straight up.



07 Lift gasket as shown to remove from bowl.

Discard the product from the bowl and remove the bowl cover.

Remove the entire bowl assembly from the base.

Remove the pinch tube, impeller and gasket.

Wash the bowl, pinch tube, impeller and gasket with warm water (120-140° F) a sponge and a mild detergent. Let parts air dry.

Wipe down the dispenser, evaporator, front panel, push handle and drip tray with a clean damp cloth and detergent solution.

Next, prepare a sanitizer solution according to supplier's instructions. It is recommended that a solution of 100ppm of chlorine or 200 ppm of QUAT be used with warm water (120-140° F).

Completely immerse all parts in sanitizer solution for 5 minutes. Do not rinse parts after sanitizing. Let parts air dry.

Insert the gasket into the bowl base and place the impeller back into the bowl.

Wipe down the dispenser, evaporator, front panel, push handle and drip tray once again with a clean damp cloth and sanitizer solution.

Re-mount the bowl assembly onto the dispenser base.

Insert the pinch tube and place the lid back onto the bowl.



08 Wash the bowl, lid, pinch tube, impeller and gasket with warm water and a mild detergent.



09 Insert the gasket into the bowl base and smooth with thumbs until the gasket is flat in bowl groove.




10 Place the impeller back into the bowl.



11 Wipe down the dispenser with a clean damp cloth.



12 Wipe down the evaporator with a clean damp cloth.

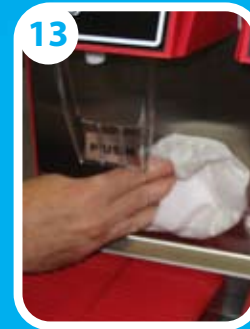

13 Wipe down the front panel with a clean damp cloth.




14 Wipe down the push handle with a clean damp cloth.



15 Wipe down the drip tray with a clean damp cloth. Repeat steps 8 through 15 with an appropriate sanitizer solution.



16 To re-mount the bowl assembly, place the bowl over the evaporator and lower. Be sure that the push handle is pulled forward.

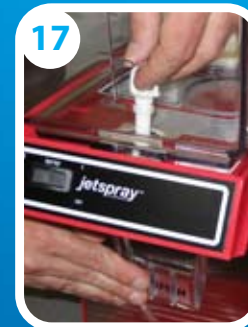

17 When properly seated, the bowl will lie flat on the base. Push the handle back and insert the pinch tube.



18 Place the lid back onto the bowl.

Important :
It is important that steps 8 through 15 are repeated with an appropriate sanitizer solution. Be sure to use protective gear for hands and eyes when handling sanitizer solution. Completely immerse all parts, bowl, lid, pinch tube, impeller and gasket, in the sanitizer solution for 5 minutes and do not rinse parts after sanitizing. Do not immerse the base of the unit in water. When wiping down the unit as seen in steps 11 through 15, be sure to use a soft cloth dampened with sanitizer solution.