

INSTALLATION INSTRUCTIONS

ED200/250 Ice Maker Lid Kits, P/N 629083801TE, 629083802TE

SAFETY



WARNING:

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

Failure to comply could result in serious injury, death or damage to the equipment.

QUALIFIED SERVICE PERSONNEL



WARNING:

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.

SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:



WARNING:

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.



CAUTION:

Always be sure to keep area around the unit clean and free of clutter.

Failure to keep this area clean may result in injury or equipment damage.

Revision Date: July 08, 2016 www.cornelius.com Revision: A



Table 1. Loose Shipped Parts

Item No.	Part No.	Name	Qty.
1.	620200136	Lid and Lanyard Assembly, Gray – 629083802TE	1
	620200134	Lid and Lanyard Assembly, Black – 629083801TE	
2.	620030906	Ice Maker Adapter Lid Assembly	1
3.	22127	Bracket	2
4.	70217	#8 Screw	12
5.	50904	RTV	1
6.	91957	Label	1
7.	629083801TEINS	Installation Instruction	1
8.	620701902	Acorn Nut, 8-32 Nylon	2
9.	620701901	Sealing Washer	2
10.	620037003	Baffle, Ice ED2XX	1
11.	621701903	#8 Nylon Washer	2
12.	02394	Ice Diverter Kit	1
13.	43164	Screw MA 08-32 TRPH 10 SS	2
14.	70100	Nut HEX 08-32 SS Nylok	2



WARNING:

Disconnect power to the unit before installing the adapter following all lockout/tag out procedures established by the user. Verify that all the power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.



WARNING:

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or the equipment manufacturer's instructions.

Failure to comply could result in serious injury, death or damage to the equipment.



All of the attachment screws and plates must be installed as directed in this manual.

Failure to comply could result in serious injury, death or damage to the equipment.



INSTALLATION PROCEDURE

- 1. Unpack the kit.
- Insert a baffle assembly into the adapter lid.
- 3. Place (2) sealing washers (item 9) over studs and (2) flat washers (item11), then fasten in place with (2) plastic acorn nuts (item 8).
- 4. Set ice maker lid on the top of the dispenser.
- 5. sing the slotted holes in the lid as a template, drill four (4) 0.140" diameter (9/64") holes at the bottom of the slots (see detail A). Use extreme care not to drill into the hopper. Fasten the lid to the dispenser with four (4) #8 sheet metal screws, two on each side.
- 6. Seal the ice maker to the top of the dispenser as follows:
 - A. Run beads of RTV around the opening in the lid and inside of the perimeter of the ice maker outline so that the ice maker will set on the RTV.
 - B. Set the ice maker onto the lid and position it as required.
 - C. Wipe away the excess RTV.
- 7. Drill 9/64" diameter holes into the ice maker cabinet using the bracket as a template. Use extreme care not to drill into any ice maker components (condenser, tubing, etc.). Secure the brackets using the screws provided.
- 8. Follow the ice maker manufacturers instruction to complete the installation of the ice maker including the bin thermostat if so equipped or required.
- 9. If the plastic acorn nuts interfere with the positioning of the plastic manual fill cover, it may be necessary to make small notches in the back flange of the cover to clear the acorn nuts.



CAUTION:

Bin Thermostat must not interfere with the agitator rotation.



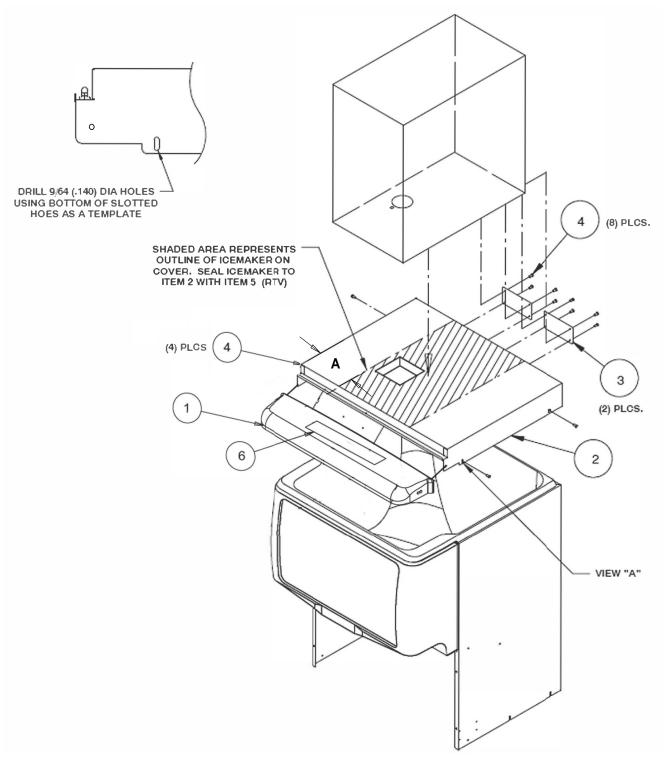


Figure 1. Dispenser Assembly

	Wilshire WCC500/700	Scotsman NME654/954
DIM.A	7-3/4 ln.	4-3/16 ln.



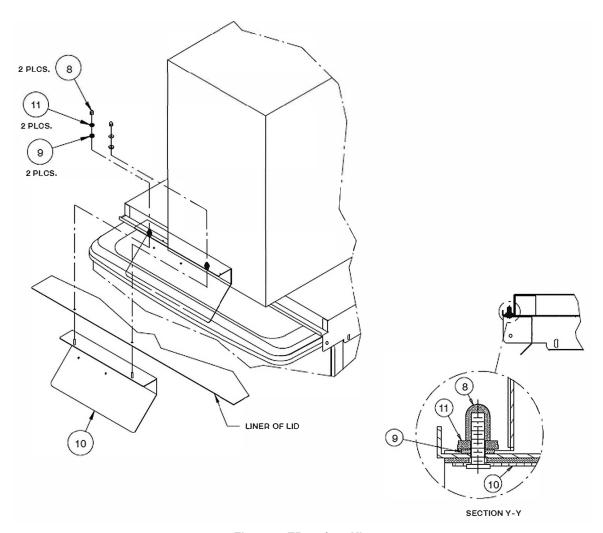


Figure 2. ED200/250 Kit

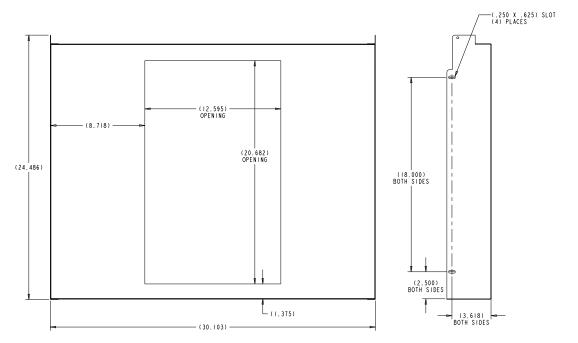


Figure 3. Reference Sheetmetal Cover Opening Dimensions for Mounting Icemaker