



INSTALLATION INSTRUCTIONS

FOR MODEL DF/ED 2XX ICE MAKER ADAPTER LID KIT, P/N 629082701

This kit applies to the following ice makers:

Table 1. Applicable Models

Ice Maker	Width
Scotsman CME 650, 865, 1002	30"

For Scotsman ice makers use bin level control kit, Scotsman P/N KSBI for CME 865 and 1002 and P/N KSB2 for CME 650. See manufacturer's instructions to install mounting brackets, before installing ice maker on dispenser.

Table 2. Loose Shipped Parts

Item No.	Part No.	Name	Qty.
1	53003	Cover, Gray	1
2	620033002	ED 200/250 Ice Maker Lid Assembly	1
3	29565	Bracket	2
4	70217	#8 Screw	6
5	50904	RTV	2
6	90221	Label	1



WARNING:

Disconnect power to the unit before installing the adaptor following all lockout/tag out procedures established by the user. Verify that all the power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.



WARNING:

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or the equipment manufacturer's instructions.

Failure to comply could result in serious injury, death or damage to the equipment.



WARNING:


All of the attachment screws and plates must be installed as directed in this manual.

Failure to comply could result in serious injury, death or damage to the equipment.

PLEASE REVIEW INSTRUCTIONS SUPPLIED

1. Set ice maker lid on the top of the dispenser.
2. Using the slotted holes in the lid as a template, drill four (4) 0.140" diameter (9/64") holes at the bottom of the slots (see detail A). **Use extreme care not to drill into the hopper.** Fasten the lid to the dispenser with four (4) #8 sheet metal screws, two on each side.

**DETAIL "A"
ENLARGED**

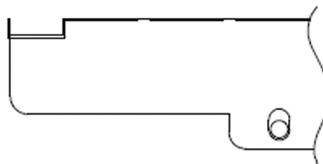

DRILL 9/64-IN. (.140) DIA. HOLES
USING BOTTOM OF SLOTTED
HOLES AS A TEMPLATE

Figure 1.

For Scotsman:

3. Perform the following steps:
 - A. Set ice maker onto cover and install bin level thermostat capillary tube. Position ice maker as shown.
 - B. Run a bead of RTV around the perimeter of the joint between the ice maker and dispenser.
4. Secure ice maker to dispenser with mounting brackets and screw provided.
5. Follow the manufacturer's instructions to complete the installation of the ice maker. Bin level thermostat capillary tube must not interfere with agitator.

NOTE: Bin Thermostat must not interfere with the agitator rotation.

NOTE: ROUTE ICEMAKER BIN LEVEL THERMOSTAT CAPILLARY TUBE AS INSTRUCTED IN SCOTSMAN KITS

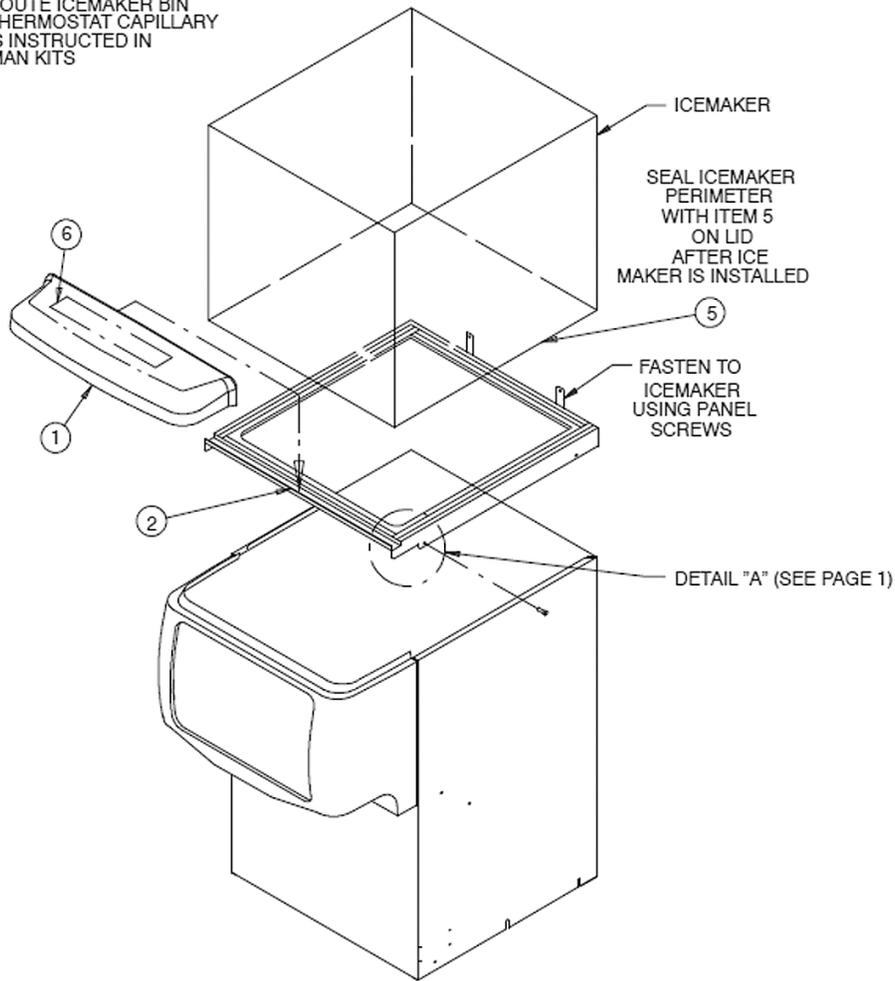


Figure 2.